

R-9030

ANTI-SUBMARINE STRAP MOUNT

(FOR AFTERMARKET SEATS)

INSTALLATION INSTRUCTIONS

This mount has been designed to provide a mounting point for an anti-submarine strap in 996/Boxster models.

Additional Required Hardware:

- One-piece racing seats with anti-sub strap pass-through (Standard reclining factory seats WILL NOT work)
- Brey-Krause R-907X series seat mount brackets


Step 1.

Press out the four studs using an arbor press or large "C" clamp.



Step 2.

With Brey-Krause side mount brackets on sliders per installation instructions, position R-9030 anti-submarine strap bar with the fire extinguisher mounting tabs facing front. Use the 4 supplied modified bolts and the original factory nuts (loctite is recommended), to hold the bar in place. Make sure sliders are parallel and 16" apart before tightening nuts.

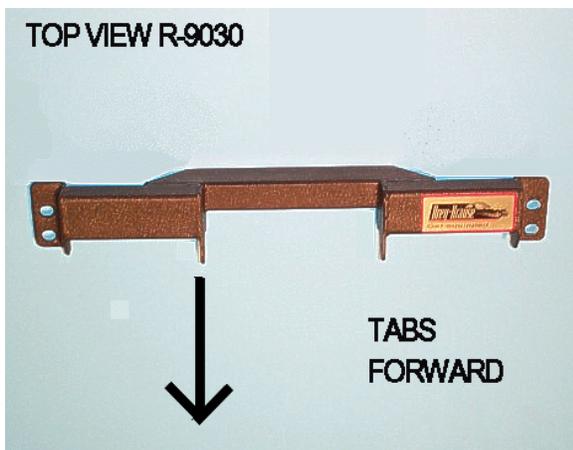

Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.